

# X67602/X67603

## INSTALLATION INSTRUCTIONS SHEET

### START FROM HERE


- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.

**Technical Support:** 1-844-628-8368

### Please Note:

- All Matteo Lighting fixtures come with pre-wired module(s).
- Unless instructed to do so, please do not touch any part of the module(s) as any unnecessary contact with the module could cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED IN A JUNCTION BOX  
*CE LUMINAIRE DOIT ÊTRE MONTÉ OU SUPPORTÉ DANS UNE BOÎTE DE JONCTION*

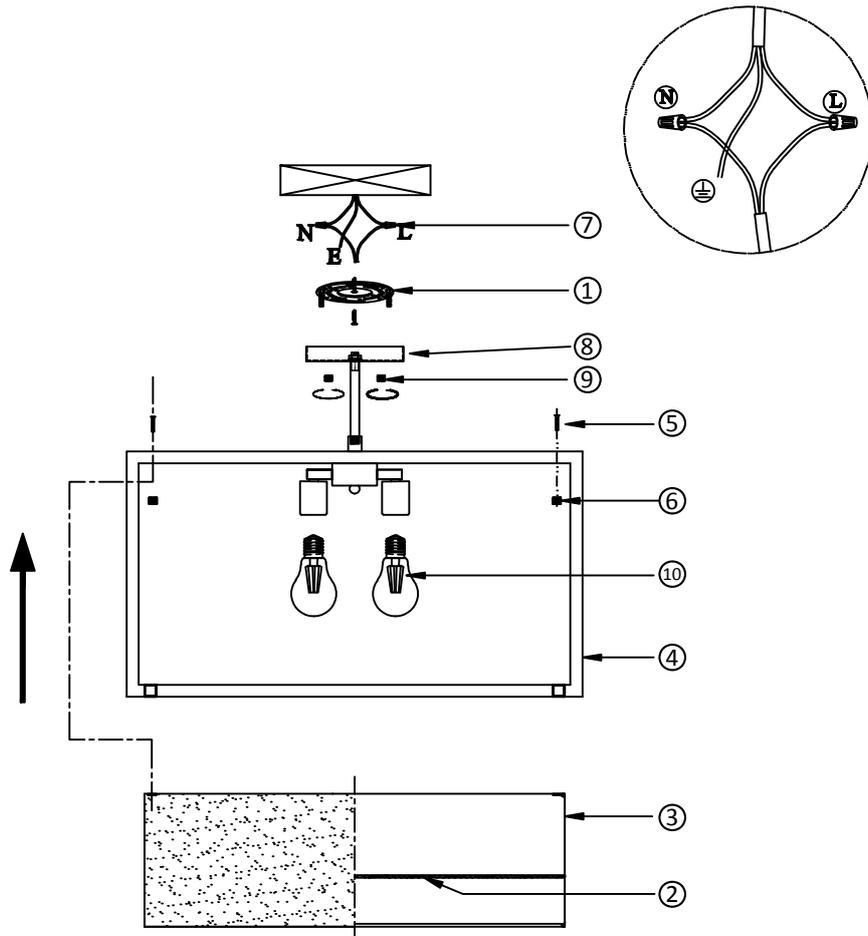

- 1 Ensure main supply is switched off.
- 2 Fit round mounting bracket(1) onto junction box with self-tapping screw.
- 3 Remove film from acrylic diffuser(2) and place into shade(3). Fix shade onto fixture(4) with screws(5) and nuts(6) from the side.
- 4 Connect wires(7) according to color (White to White, Black to Black). Connect all earth plug together onto the crossbar with green screw to tight.
- 5 Fix canopy(8) onto mounting bracket with finials(9).
- 6 Install lamps(10) onto lampholders
- 7 Reconnect power.